



LOOK TO PSI
Optical Laboratory
Supplies & Equipment



All PSI Blocking pads are
double-tabbed for easy removal

PSI Blocking Pads For Any Lens!



SecurEdge® For Hard Coated Lenses


- Unique reinforced foam that resists torque forces in the X-Y direction
- Soft foam surface conforms to lens curvature
- Modified acrylic adhesive system adheres to a wide range of hard coatings
- Available in a variety of shapes and sizes



SecurEdge® PLUS For AR & Super Hydrophobic Lenses

- Dual adhesive system: one side offers a unique adhesive that will stick to AR and super hydrophobic coatings while the other side is designed to adhere to the block and remove easily*
- Soft foam surface conforms to any curve while protecting the lens
- One-step system that doesn't require the use of a lens dot to adhere to the lens

* *Be sure the side of the blocking pad that the white liner is on is against the lens, allow adhesive to cure for 15 minutes before processing.*

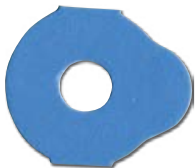


PSI BLUE For Hard Coated Lenses

- Economically priced, production proven product that is torque resistant
- Aggressive non-slip positive holding adhesive keeps pads in place
- Available in a variety of shapes and sizes



PSI RED For Hard Coated Lenses

- Aggressive enough for standard AR, hard coats and hydrophobic coatings
- Double tabbed to remove easily leaving progressive markings behind and no residue
- Layered, reinforced foam keeps pad from twisting on lens

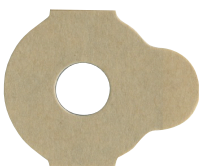

Sure-Mount For Hard Coated Lenses

- For both hydrophobic and standard AR or hard coated lenses
- Made of a thin, yet strong material that reduces flexing or torquing on the lens, reducing slippage with flexible blocks
- High tack adhesive offers a secure hold that releases cleanly without removing progressive markings or leaving residue
- Bonds quickly so there is no need to wait before edging lenses

* SecurEdge Plus is not recommended for lenses that are not AR coated because it may be difficult to remove.
SecurEdge® is a registered trademark of St. Gobain Performance Plastics

To Order Call 800-237-8154 or Fax 800-330-3800



PRACTICAL SYSTEMS INC.
11617 Prospect Drive • Odessa, FL 33556
(800) 237-8154 • Fax (800) 330-3800
www.LookToPSI.com



Blocking Supplies Quick Reference Guide

Blocking Pad Ordering Guide

Blocks Sizes:	Standard AIT or SemiTech	1/2-eye AIT or SemiTech	Standard Weco	1/2-Eye Weco	Oval Weco	Standard Kappa/Gamma	1/2-Eye Kappa/Gamma	Standard Nidek	
Recommended PSI Blocking Pads									
SecureEdge	2805 or 2805SD	2807 or 2807SD	2811	2808	2812SD	na	2811	2809	2813
SecureEdge Plus	4805 or 4805SD	4807 or 4807SD	4811	4808	4812SD or 4814	na	4811	4809	4813
PSI Blue	2810 or 2810SD	2850 or 2850SD	na	na	na	na	na	2818	na
PSI Red	5805	na	na	5808	na	na	na	na	na
Sure Mount	4105	na	4110*	4108	na	4114	4110*	4109	na

* Also available with solid center, part #4110SD

Blocks

- Available for AIT, SemiTech, Coburn, Weco, Gamma and Kappa machines
- Low base blocks are less than 4 base front curve
- High base blocks have an 11-14 base front curve



Part #	Configuration	Type	Base	Machine Type	Pkg Qty
1678-1/2A	1/2 Eye	Metal	Standard	AIT	1
1678-1/2ST	1/2 Eye	Metal	Standard	SemiTech	1
1678A	Standard	Metal	Standard	AIT	1
1678ST	Standard	Metal	Standard	SemiTech	1
1678CO	Standard	Metal	Standard	Coburn	50
1682-1/2A	1/2 Eye	Metal	Low Base	AIT	1
1682-1/2ST	1/2 Eye	Metal	Low Base	SemiTech	1
1682A	Standard	Metal	Low Base	AIT	1
1682ST	Standard	Metal	Low Base	SemiTech	1
1682CO	Standard	Metal	Low Base	Coburn	20
1683-1/2A	1/2 Eye	Metal	High Base	AIT	1
1683-1/2ST	1/2 Eye	Metal	High Base	SemiTech	1
1683A	Standard	Metal	High Base	AIT	1
1683ST	Standard	Metal	High Base	SemiTech	1
1683CO	Standard	Metal	High Base	Coburn	20
6002-2073	Black Standard	Flexible	—	Weco	25
6002-2074	Black 1/2 Eye	Flexible	—	Weco	25
6002-2072	Black	Flexible	—	Weco	25
80042	Red Standard	Plastic	—	Kappa/Gamma	25
80043	Red 1/2 Eye	Plastic	—	Kappa/Gamma	25

